

400 mm

140 mm

SAFETY

- 1) Do not disassemble, repair or modify the product without authorization. If you need to repair, please contact hello@revive-eo.com.
- 2) If the power cord is damaged, please stop using it to avoid danger.
- 3) If there are odors, noises, or abnormal heat please immediately unplug the diffuser and contact hello@revive-eo.com.
- 4) Unplug the appliance during filling, moving and cleaning.
- 5) When the product is on, do not cover the mist outlet with objects.
- 6) Do not place the product in high temperature or direct sunlight, and keep it away from heat sources.
- 7) The product should be placed on a flat and firm place, not on carpet, mats or unstable places.
- 8) Do not directly place the product on a wooden surface to avoid water marks and damage.
- 9) Please place the product 2 meters away from the furniture and electrical appliances to avoid other electrical appliances from being affected by damp.
- 10) Never leave water in the reservoir when the appliance is not in use.
- 11) When cleaning or emptying water from the unit, avoid water entering into the air inlet of the product.

TROUBLESHOOTING

 
When the product does not work properly, please refer to the following conditions to troubleshoot:

The mist button is on, but no mist, mist is small or mist shuts off immediately.	Possible cause: Lack of water or not enough water. Solution: Add water into the water tank.
The mist button is on, mist is lower or abnormal.	Possible cause: Too much water. Solution: Don't add water more than the MAX line. Possible cause: Dirt on ultrasonic plate. Solution: Wash water tank and ultrasonic plate (refer to Maintenance).
Leaking water	Possible cause: The water tank lid not cover well. Solution: Cover the lid well.

SPECIFICATIONS


Product Size: 3.8" x 3.7" x 6.3"
Voltage: DC 5V 2A
Rated Power: About 10W
Battery Capacity: 5000mAh
Net Weight: 14.11oz
Capacity: 80ml
Mist Output: 10-25ml/h
Material: PP
Accessories: USB Type-C cable, user manual

REVIVE
Bloom Ultrasonic Diffuser

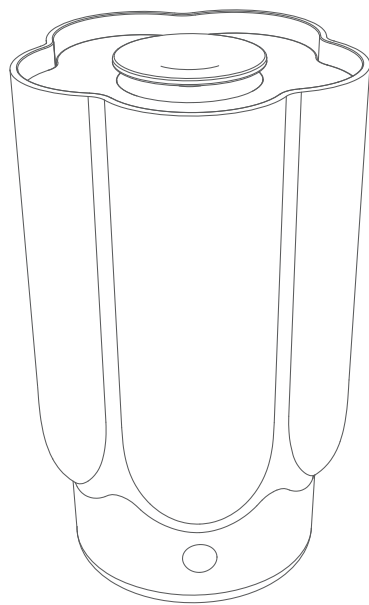


Read User Manual Carefully Before Use

 DIRECTIONS


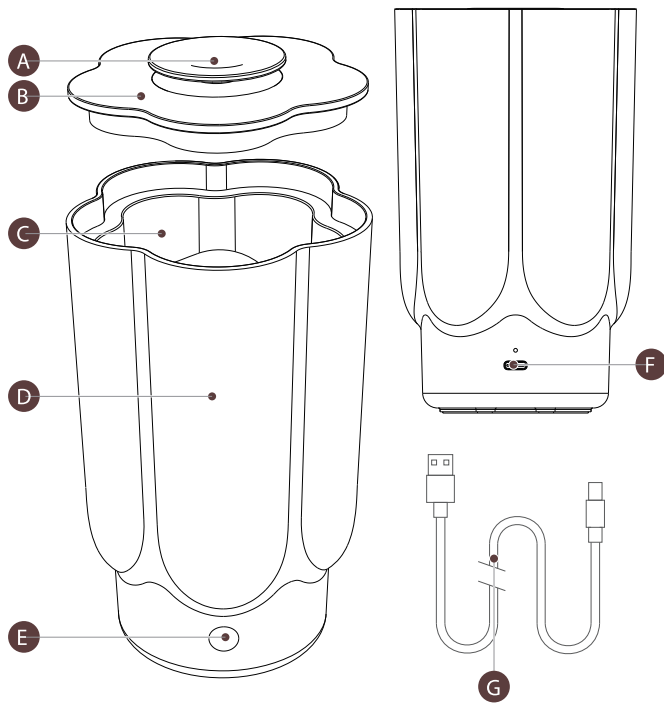


- A. Mist Outlet
B. Lid
C. Water Tank
D. Main Body
E. Power Button
F. USB port
G. USB Type-C Cable

 DIRECTIONS

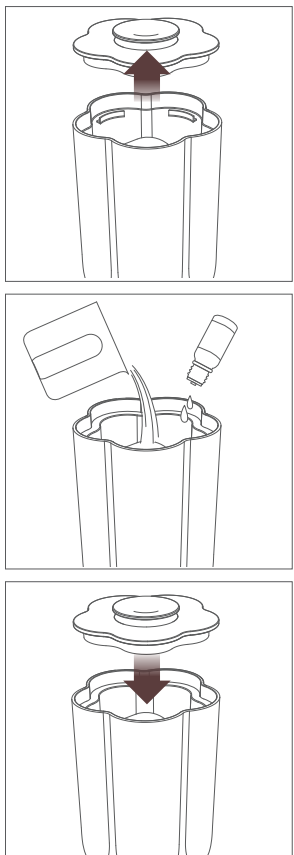

  - 1 Place the product on a flat surface and remove the lid.
- 2 Add water and essential oil into the water tank. Please do not exceed the maximum water level and do not use hot water.
- 3 Put the lid back on.

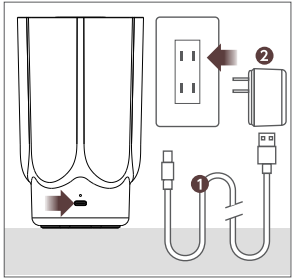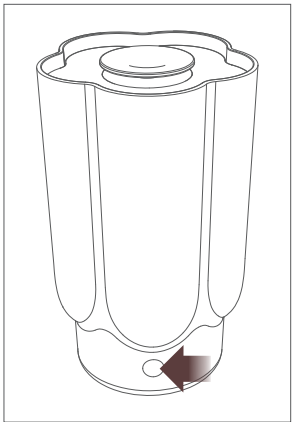

- 4
- How to use Touch Button:
- Long touch for 2s to turn on mist and ambient light.
 - Touch 1 - Interval mist (30s on and 30s off), with ambient light on.
 - Touch 2 - Light off, and mist still on
 - Touch 3 - Turn off mist.
 - Long touch for 2s, will turn off mist and light during any function.

- 5
- Charging
- Use USB-C cables for charging
- If the battery power is lower than 20%, the indicator light will be red and if the battery power is lower than 10%, the ambient light will be blinking.
- When charging, the indicator will be a pulsing white light. Once charging is completed, the light will

CLEANING & MAINTENANCE

In order to maintain the best performance of the product, the water tank and ultrasonic plate of the product should be cleaned after each use.

- Please clean it as the following methods.
- 1) Turn off the product, unplug the power cord, and remove the top lid.
 - 2) Pour any remaining water out of the tank from the drain side.
 - 3) Do not use chemical solvents to clean. First dilute a small amount of kitchen detergent into water, dampen a soft cloth and then wipe the product with the cloth softly and finish by dryer the product. Do not immerse the product into water.
 - 4) When there is dirt on the atomizing sheet, do not clean it with a sharp object. Please wipe the atomized sheet with a moist cotton swab.
 - 5) When the product is not used for a long time, please clean all parts, dry them, then put them into the original packaging, and put them in the dry and cool place.